SETTING CUES ON THE EOS ION SYSTEM

Contents

	To Record a Cue	3
•	Label a Cue	4
•	To Update/Re-Record Cue	5
•	To Update a Cue using the Update button	7
•	To Delete a Cue	8
•	To Go to a Specific Cue	9
•	To adjust Transition Time of Cue	10
•	To Edit House Lights out of a Cue	11
•	Sub Master recording shortcut	13
•	To Remove a channel from Sub Master	14
•	To Remove a Sub Mix from a Fader	15
•	Patch	16

Contents Continued

	Patch LED Light	17
	To Save a Show	
•	Blind Editing	20

To Record a Cue

- 1. Set the lights you want to be up in the cue via fader or singling out channels
- 2. Click Record > Cue > [number of cue]> Enter
- 3. The cue should now pop up in the **PSD Cue List**

Label a Cue

- 1. Press Blind > Cue > [number of Cue]
- 2. Press Label
- 3. Use keyboard to type name > Enter

To Update/Re-Record a Cue

- 1. Determine what cue you are updating
- 2. Click Go To Cue > [Cue Number] > Enter
- 3. Edit Cue by taking up faders or channels*
- 4. Click Record > Cue > [Same Cue Number]> Enter

3.

*If you need to lower any lights, you will need to do it manually by editing the channel or resetting all the lights. The faders will not affect the light levels once in the cue if you are trying to bring down a light.

To Update a Cue using the Update button

- 1. While in the cue, adjust levels > Enter > Update
- 2. Confirm and press Enter again

6.

To Go to a Specific Cue

To Delete a Cue

- 1. Determine which cue you want to delete
- 2. Click Delete > Cue > [cue number] > Enter > Enter

1. Click Go To Cue* > [Cue Number] > Enter

Note: Remember that "Go To Cue" is a separate key than "Cue"

7.

To adjust Transition Time of a Cue

Press Cue > [number of cue] > Time
 > [enter the amount] > Enter

To Edit House Lights out of a Cue

If you recorded cues while house lights are on, determine which cues you will need to edit them out of.

Next Page...

10.

Sub Masters

Sub Master recording shortcut

Press Record button > [adjust lights]
 or {raise faders] > Press bump button
 [on Submaster you want to record]

- Enter Blind Mode by selecting "Blind" >
 Click Cue > [Cue Number(s), using either
 "thru" or "+"] > Enter
- Enter 200 [#200 is channel for house lights] > At > Out > Enter

Go back to Live Mode by Clicking "Live"

11.

To Remove a channel from Sub Master

To Remove a Sub Mix from a Fader

1. Enter Channel > AT > Intensity 0 > Enter

- 1. Push and hold down the Shift button on console
- 2. Push both buttons under the Fader you want to unmap

14.

15.

<u>Patch</u>

Patch LED Light

- 1. Press display button > Softkey 3 [select patch] this will show columns of channels / addresses
- [To assign address to Channel] Select channel > AT
 type in address > Enter
- 1. Open new tab > Click on Patch [now in Blind Mode]
- 2. Type in channel number you want > Enter
- Select type of light > manufacturer > Generic [if light is not listed] > LED RGBA-8A

Patch LED Light Cont.

To Save a Show

- 6. Click on Live Table [your channels and addresses]
- 7. To change color > Open new tab > Choose color picker > select color

*To Save the Show you are working on click Shift > Update

18.

19.

Blind Editing

Blind has a blue background on screen and blue in the command line. If you adjust levels in blind, the changes are immediate and permanent. *Select channel and adjust* (auto records).

Blue numbers mean the level is higher than the previous cue. **Green** means the level is lower than previous cue. **Magenta** means level is the same as the previous cue.