


# Fountain View Room Startup

## To Start System & Power On Projector

 Press the Welcome Screen to start up the system



Please wait while the system initializes. The projector will turn on automatically.

Press “Wallplate Laptop Connection” to use the Laptop on the Cart.  
Press “Desktop PC” to use the built-in computer. (No USB access)



Confirm HDMI cable is connected to lower wall plate.




## To Shut Down

 Press “System Power” at top Left.



- Confirm Shut Down by pressing “Power The System Off”



- If you are having issues, please read the Trouble Shooting Tips

# Trouble Shooting Tips

## No Video on Screen


---

- Check projector is powered on.
- Check the selected source on the panel. Example: “Wallplate Laptop Connection”.
- Check HDMI cable connection at laptop and lower wall plate.
- Check display settings on computer in use. Right click on desktop and select Display Settings. Look under Multiple Displays. Choose “duplicate these displays”.

## No Computer Audio

---

- Check laptop audio setting at bottom right of desktop display. Adjust slider volume level and un-mute. Also check the source is selected to “Crestron”.
- If playing a You Tube video, check audio adjustment at bottom left of video. Un-mute and adjust slider.
- Check “Program Audio” on wall plate. Adjust volume by pressing the speaker icon. Make sure the mute function is not selected.

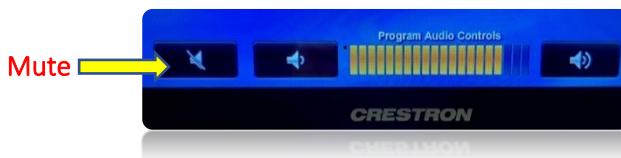

**Need Help?**

---

Call Conference and Event Services

901-678-2041